

Pre-Dive Camera Setup Ikegami HDL-40

First! Black Balance: (Camera has to warm up for 20 minutes before adjustment)

- **Operator Action:** Press AWB/ABB momentary switch down towards 'ABB'. (Fig. 1)



(Fig. 1)

- **Camera Response:** Indicator above AWB/ABB switch glows orange when camera initiates process. (Fig. 2)



(Fig. 2)

- **Camera Response:** **Camera caps iris automatically (Black Screen).**
- **Camera Response:** Balancing process is run over 4-8 seconds and the iris is uncapped by the camera automatically following completion of the process. The indicator light in Fig. 2 should not be lit.

**** If the iris is not capped automatically the camera is in an error state which will not allow the procedure to be properly completed. The indicator in Fig. 2 above will flash orange if the process is not executed correctly. Clear this alarm by pressing the switch towards 'AWB' and repeat.**

Second! White Balance: (Needs to be done below photic zone or **ideally at site and when water clarity or working distance from camera/lights changes**)

- **Operator Action:** Place a 100 IRE white reference card in front of the lens, filling 50-75% of the field of view (Zoom if necessary). Check your exposure (iris) to ensure that enough light is getting on the card, but it is not over-exposed. Check that the card is uniformly lit across the entire surface, without shadows or ripples. **Failure to setup this procedure exactly as above will result in either an unsuccessful attempt by the camera to complete the process, or a less than accurate color representation recorded during the dive.**
- **Operator Action:** Select “auto iris” so it is lit. Press AWB/ABB momentary switch up towards ‘AWB’. (Fig. 3)



(Fig. 3)

- **Camera Response:** Indicator above AWB/ABB switch flashes green when camera initiates process. (Fig. 4)



(Fig. 4)

- **Camera Response:** Indicator (Fig. 4) goes out when process is completed correctly.
- ** **If not completed correctly the indicator will flash green. If flashing, you must press the ‘AWB/ABB’ switch towards ‘AWB’ to clear the alarm. Check that all setup procedures were done correctly and repeat.**